


Cut out template and trace onto mounting surface.

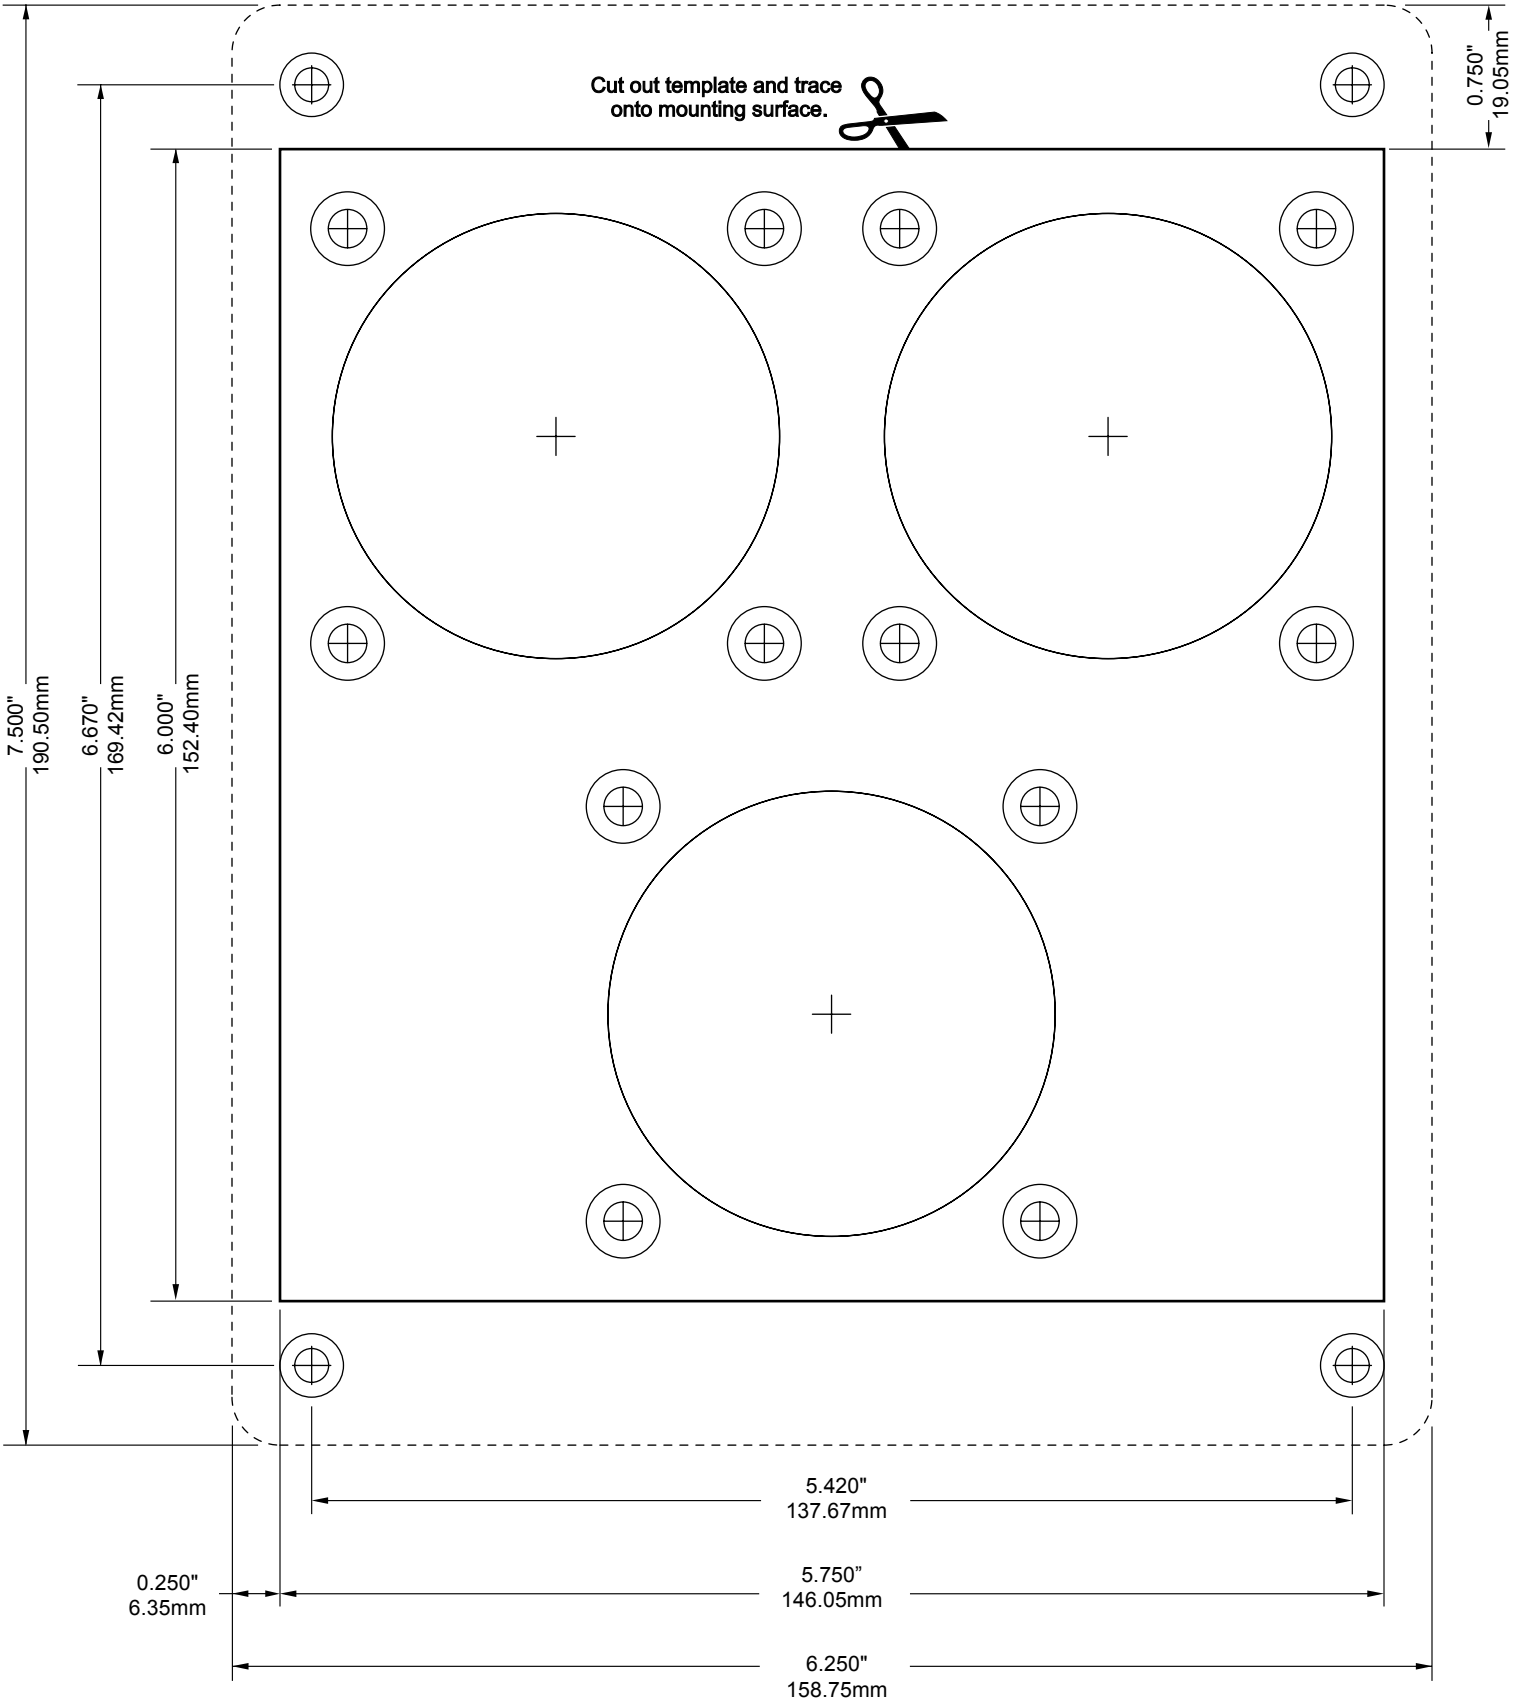

THIS TEMPLATE HAS BEEN PROVIDED TO HELP YOU INSTALL YOUR NEW BLUE SEA SYSTEMS POWER DISTRIBUTION PANEL.		BLUE SEA SYSTEMS 425 Sequoia Drive Bellingham, WA 98226 Phone (360)738-8230 Fax (360)734-4195	
PANEL CUTOUT DIMENSIONS FOR PN 8280 PANEL			
DATE	SCALE	DOCUMENT NO.	REVISION
03-30-06	DO NOT SCALE	6620	B
SHEET		1 OF 1	

DIMENSIONS ARE SHOWN IN INCHES AND [MILLIMETERS]