



Thank you for purchasing the Lumitec Cockpit Flood Light. This light utilizes Lumitec's proprietary technology to cast a broad, even light over a wide area in a color optimized for easy viewing and reduced eye fatigue. If a narrower beam pattern and/or a brighter central beam area are required you may also consider Lumitec's LED spot light.

Installation Instructions:

1. Select mounting location. At a mounting height of 8 feet, a primary illumination area approximately 12 feet in diameter will be brightly lit. A secondary illumination area considerably larger than this will also be lit, albeit to a lesser degree. Illumination areas will change based on the mounting height and light angle. Select a mounting height and location best suited to your particular needs.
2. Securely mount and position the light using the mounting hardware provided.
3. Establish the electrical connections per ABYC guidelines. Device is polarity sensitive. Light draws approximately 1A at 12VDC, .5A at 24VDC. Ensure that gauge of the power wires and the fuse configuration are appropriate for the specific installation. For optimal performance and reliability, Lumitec recommends a completely sealed wire to wire connection, such as an adhesive-lined butt connector.

Note: Your Lumitec Cockpit Flood Light may become warm or hot to the touch during normal operation. This is not damaging to the light or to normal mounting surfaces but care should be taken to avoid injury. The Cockpit Flood Light should not be installed in enclosed or confined spaces which restrict airflow to the light's cooling fins. Overheating may cause the light to shut down partially or completely. If this occurs the light should be turned off and allowed to cool fully. Ensure that the light has ample air circulation before turning the light back on.

Limited Warranty

The product is warranted to be free from defects in workmanship and materials for a period of one year from the date of original purchase.

Lumitec is not responsible for product failure caused by abuse, neglect, improper installation, or failure in applications other than those for which it was designed, intended, and marketed.

Should your Lumitec product prove defective during the warranty period, promptly notify Lumitec and return product with freight prepaid. Lumitec will, at its option, repair or replace the product or defective portion without charge for parts or labor, or, at Lumitec's option, refund purchase price. Products repaired or replaced under this warranty shall be warranted for the unexpired portion of the warranty applying to the original product(s). No warranty or affirmation of fact, express or implied, other than as set forth in the limited warranty statement above is made or authorized by Lumitec, Inc. Any liability for consequential and incidental damages is expressly disclaimed. Lumitec liability in all events is limited to, and shall not exceed, the purchase price paid.

Lumitec, Inc.
1450 SW 10th Street, Suite 2
Delray Beach, FL 33444
lumiteclighting.com

part # 600025



Thank you for purchasing the Lumitec Cockpit Flood Light. This light utilizes Lumitec's proprietary technology to cast a broad, even light over a wide area in a color optimized for easy viewing and reduced eye fatigue. If a narrower beam pattern and/or a brighter central beam area are required you may also consider Lumitec's LED spot light.

Installation Instructions:

1. Select mounting location. At a mounting height of 8 feet, a primary illumination area approximately 12 feet in diameter will be brightly lit. A secondary illumination area considerably larger than this will also be lit, albeit to a lesser degree. Illumination areas will change based on the mounting height and light angle. Select a mounting height and location best suited to your particular needs.
2. Securely mount and position the light using the mounting hardware provided.
3. Establish the electrical connections per ABYC guidelines. Device is polarity sensitive. Light draws approximately 1A at 12VDC, .5A at 24VDC. Ensure that gauge of the power wires and the fuse configuration are appropriate for the specific installation. For optimal performance and reliability, Lumitec recommends a completely sealed wire to wire connection, such as an adhesive-lined butt connector.

Note: Your Lumitec Cockpit Flood Light may become warm or hot to the touch during normal operation. This is not damaging to the light or to normal mounting surfaces but care should be taken to avoid injury. The Cockpit Flood Light should not be installed in enclosed or confined spaces which restrict airflow to the light's cooling fins. Overheating may cause the light to shut down partially or completely. If this occurs the light should be turned off and allowed to cool fully. Ensure that the light has ample air circulation before turning the light back on.

Limited Warranty

The product is warranted to be free from defects in workmanship and materials for a period of one year from the date of original purchase.

Lumitec is not responsible for product failure caused by abuse, neglect, improper installation, or failure in applications other than those for which it was designed, intended, and marketed.

Should your Lumitec product prove defective during the warranty period, promptly notify Lumitec and return product with freight prepaid. Lumitec will, at its option, repair or replace the product or defective portion without charge for parts or labor, or, at Lumitec's option, refund purchase price. Products repaired or replaced under this warranty shall be warranted for the unexpired portion of the warranty applying to the original product(s). No warranty or affirmation of fact, express or implied, other than as set forth in the limited warranty statement above is made or authorized by Lumitec, Inc. Any liability for consequential and incidental damages is expressly disclaimed. Lumitec liability in all events is limited to, and shall not exceed, the purchase price paid.

Lumitec, Inc.
1450 SW 10th Street, Suite 2
Delray Beach, FL 33444
lumiteclighting.com

part # 600025