



### Change Sweeping Angle

- Remove cover plate with “+” screw driver
- Using “-” screw driver to remove the “U” shape clip on the shaft connecting transmission plate to the main shaft
- Lift the transmission plate
- Unscrew the 2 screws fastening the angle plate to the white cog wheel. Note there is an oblong hole in the white cog wheel
- Replace the angle plate – align the hole marked with the desire sweep angle with the oblong hole in the white cog wheel
- Then screw the angle plate back
- Replace the transmission plate, replace the “U” clip

### To Adjust Left or Right Self-Parking

- For example, to used 80° right self-parking:  
Place the angle plate with round hole of the 80° on the “R” oval hole of the gear and fix it. Now, it will be 80° right self-parking.
- To use left self-parking  
Place the angle plate with the required on the “L” oval hole of the gear and fix it. Thus, making it left self-parking.