



## JACK PLATE INSTALLATION AND PROGRAMMING INSTRUCTIONS

### INSTALLING THE JACK PLATE

Mount your jack plate to your transom using stainless steel hardware (NOT INCLUDED). Use a marine grade sealant around all bolt holes.

Mount your motor to the lift plate. (Torque all bolts to manufactures specifications)

Mount the control box in a secure location. We recommend a compartment out of the elements.

Route the actuator cable and trailer button cable to your control box. NOTE: The Trailer button can be positioned on either side of the plate to match the trim switch on the outboard. The unit is shipped with a cover plate to cover the mounting hole on the side not being used.

Connect the actuator cable and trailer button to the control box.

If you are using a blinker switch or paddle switch connect the 3-wire cable to the switch wiring, then connect the 3-wire cable to the control box.

(Please note the wiring color code for the 3-wire cable as RED=COMMON, BLUE=RAISE, GREEN=LOWER.)

Attach the power leads to your Starting/House battery (12V) or if your boat has a 12V terminal block you can attach to the terminal block.

### PAIRING THE REMOTE

If your remote is not paired with the control box or if you are replacing the remote you will need to pair the remote to the control box.

To pair the remote, you first need to remove power to the control box by disconnecting the power wire. (If you have this installed on a system that is controlled by a master switch you can turn the switch off to disconnect power)

Once the power is disconnected press and hold the Up-arrow button and then press and hold the Memory 3 button for 3 seconds on your remote. The remote screen will go blank. You can release both buttons at that time. Once you release the buttons the screen will have a message "LOOKING FOR LINK POWER ON CONTROL", once this message is displayed pairing will stay active for 15 seconds.

During this time reattach the power cable to the battery or turn on the power switch. This will complete the pairing process and your remote should now control the jackplate.

### SETTING MEMORY POSITIONS

Move the jack plate to the desired height.

Press and hold the desired MEMORY button or the TRAILER button for 3 seconds.

### MANUAL OVERRIDE

To manually lift or lower the plate, simply use the included 6mm Allen Wrench to loosen the cover screw in the top of the actuator housing. Once the screw is removed, insert the long end of the wrench into the slot and turn. Clockwise=Lower, Counterclockwise=Raise