


Forward
(Bow)

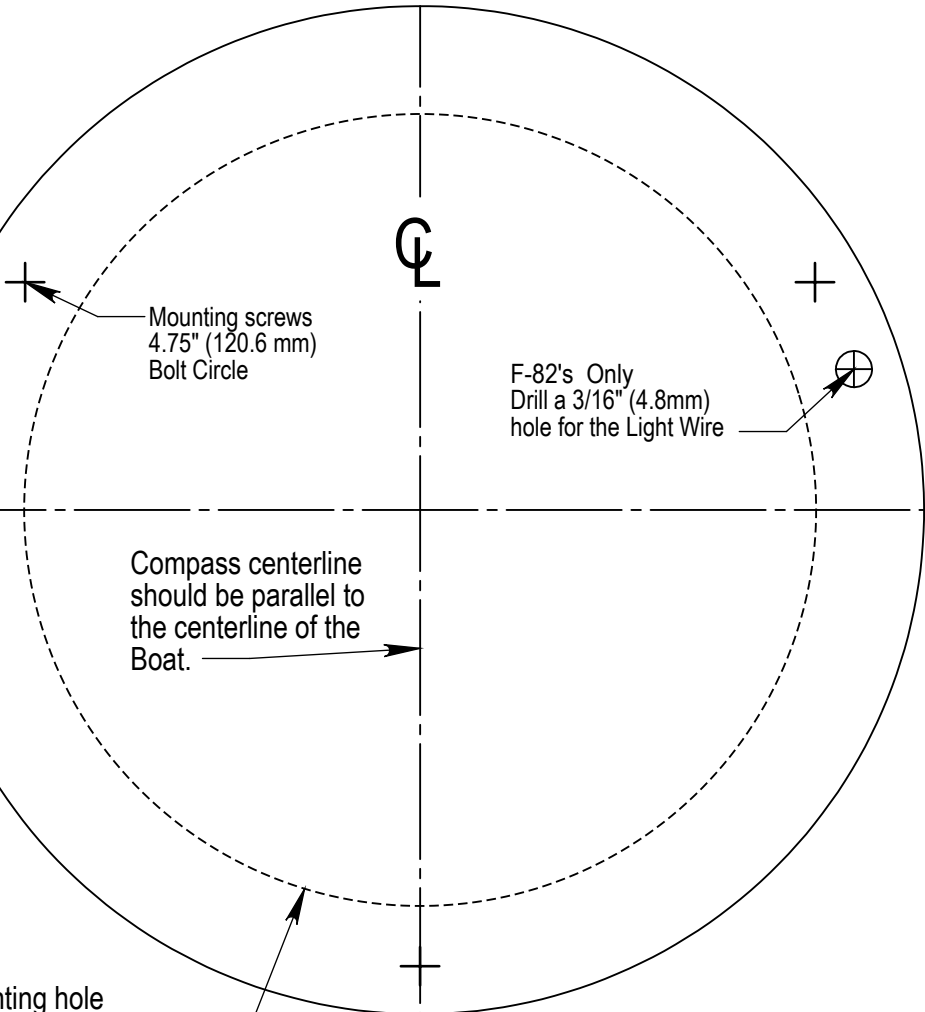

Mounting screws
4.75" (120.6 mm)
Bolt Circle

F-82's Only
Drill a 3/16" (4.8mm)
hole for the Light Wire

Compass centerline
should be parallel to
the centerline of the
Boat.

Mounting hole
Cut along this line
4 1/8" (105 mm)

Mounting the Compass in an existing hole

A mounting hole can be as small as 3 1/2" (82 mm) if the compass is offset or a notch is made for the protruding screw boss on the body of the compass.

A mounting hole must be no larger than 4 3/16" (107 mm) to accommodate for the mounting screws.

RITCHIE®

Mounting Template for
the F-82's & RU-90's

Part # VY-0263

Rev - 2/13