

PTMEdge Mirror - Installation:

1. Unpack your new PTMEdge mirror bracket.
2. Locate the upper clamp.
3. Position the mirror bracket on the windshield frame.
4. Position the lower clamp and loosely install the (2) mounting bolts (if not already in mount) through the lower clamp.
5. Finish positioning the mirror bracket in the desired position on windshield frame and securely tighten the bolts with an 1/4" allen wrench (NOT Included).
6. On some PTMEdge mirror models the fit of the mount to the windshield frame may be improved by using rubber shims. (Included with some models).
7. Install the mirror to the mirror arm. (Insure the square on the swivel seats in the square socket in the mirror arm).
8. If not already attached, secure mirror to mirror bracket with the mirror adjustment knob.

DOWN Position (For Trailing)



PTMEdge Mirror - Operation:


From DOWN to UP Position:

1. While holding the mirror loosen the lock knob (2) full turns (ccw) and rotate the mirror assembly to the full up position.
2. When in up position slide the mirror arm down till firmly seated.
3. Continue to hold the mirror in the full up position position and tighten the lock knob (2) full turns (cw) till snug to secure the mirror in place.
4. Loosen the mirror adjustment knob and adjust mirror to desired viewing position, then tighten securely.

PTMEdge Mirror - Operation:

From UP to DOWN Position:

1. While holding the mirror loosen the lock knob (2) full turns (ccw).
2. Lift up on the mirror arm firmly till the mirror arm is in the unlocked position.
3. Rotate the mirror assembly to the full down position.
4. Continue to hold the mirror in the full down position position and tighten the lock knob (2) full turns (cw) till snug to secure the mirror in place.

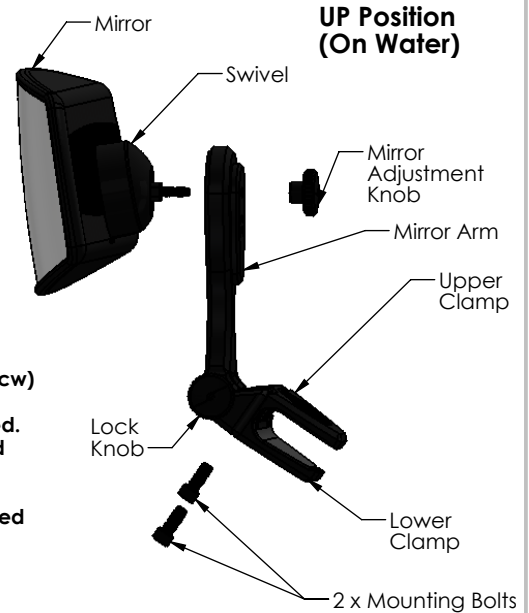

1010 Larson Drive, Oak Ridge, TN 37830
(865) 425-0600 www.ptmedge.com

CFR Series - Instructions

PTMEdge Mirror - Installation:

1. Unpack your new PTMEdge mirror bracket.
2. Locate the upper clamp.
3. Position the mirror bracket on the windshield frame.
4. Position the lower clamp and loosely install the (2) mounting bolts (if not already in mount) through the lower clamp.
5. Finish positioning the mirror bracket in the desired position on windshield frame and securely tighten the bolts with an 1/4" allen wrench (NOT Included).
6. On some PTMEdge mirror models the fit of the mount to the windshield frame may be improved by using rubber shims. (Included with some models).
7. Install the mirror to the mirror arm. (Insure the square on the swivel seats in the square socket in the mirror arm).
8. If not already attached, secure mirror to mirror bracket with the mirror adjustment knob.

DOWN Position (For Trailing)



PTMEdge Mirror - Operation:


From DOWN to UP Position:

1. While holding the mirror loosen the lock knob (2) full turns (ccw) and rotate the mirror assembly to the full up position.
2. When in up position slide the mirror arm down till firmly seated.
3. Continue to hold the mirror in the full up position position and tighten the lock knob (2) full turns (cw) till snug to secure the mirror in place.
4. Loosen the mirror adjustment knob and adjust mirror to desired viewing position, then tighten securely.

PTMEdge Mirror - Operation:

From UP to DOWN Position:

1. While holding the mirror loosen the lock knob (2) full turns (ccw).
2. Lift up on the mirror arm firmly till the mirror arm is in the unlocked position.
3. Rotate the mirror assembly to the full down position.
4. Continue to hold the mirror in the full down position position and tighten the lock knob (2) full turns (cw) till snug to secure the mirror in place.

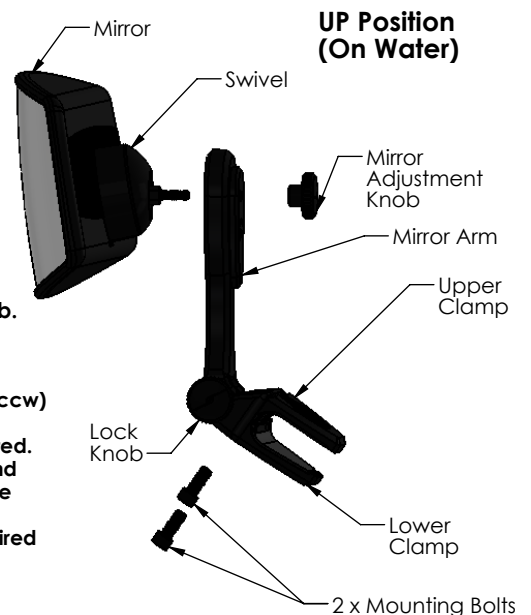

1010 Larson Drive, Oak Ridge, TN 37830
(865) 425-0600 www.ptmedge.com

CFR Series - Instructions