





### Installation:

1. **Do not** use Teflon tape or sealant on the threads. It will cause a grounding issue and the sender will not work properly.
2. **Do not** use "T" or angle adapters for temperature senders since the sender tip will not be properly located in the fluid flow.

### Temperature Senders:

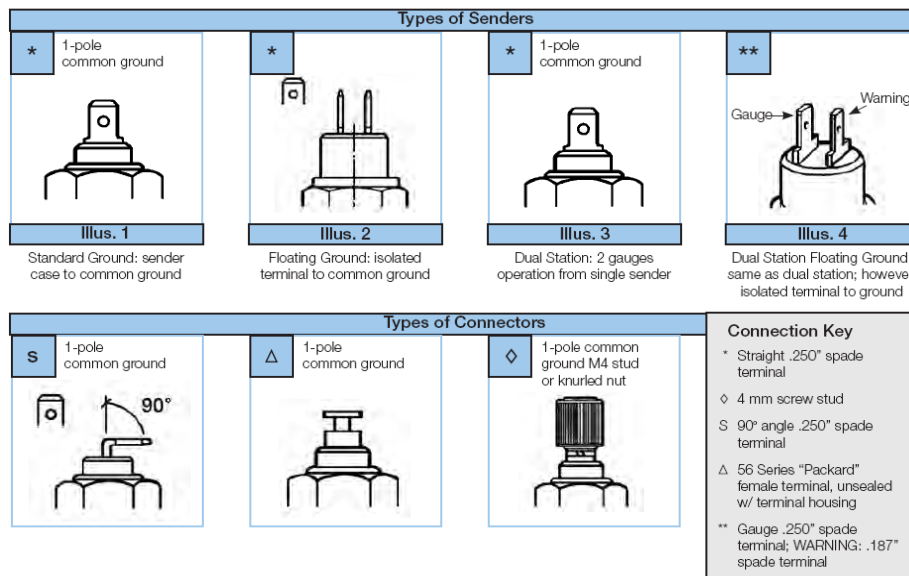

### Pressure Senders:

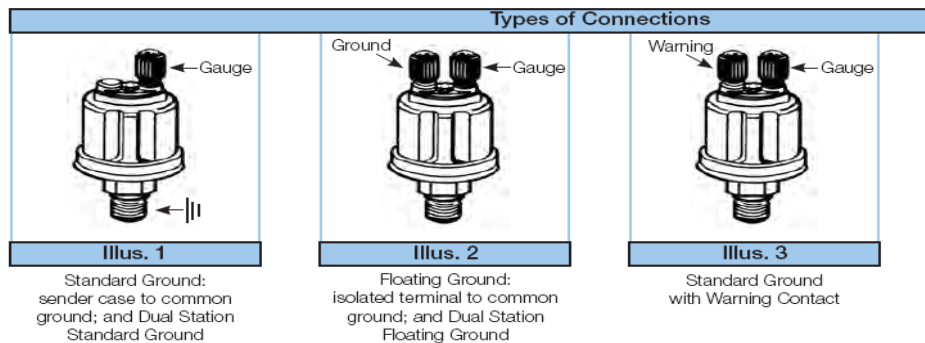



# TEMPERATURE AND PRESSURE SENDERS

Tech Support 1-800-265-1818  
http://usa.vdo.com

Instruction Sheet # A2C59519516

Rev 03-2011

## Installation Torque

### Temperature Senders

Thread Size	Max Torque (Nm)	Max Torque (ft lb)
1/8 – 27 NPTF	10	7
1/4 – 18 NPTF	20	15
3/8 – 18 NPTF	30	22
1/2 – 14 NPTF	30	22
5/8 – 18 UNF-3A	20	15
M10 x 1.0	10	7
M12 x 1.5	15	11
M14 x 1.5	20	15
M16 x 1.5	30	22
M18 x 1.5	30	22

### Pressure Senders

Thread Size	Max Torque (Nm)	Max Torque (ft lb)
1/8 – 27 NPTF	30	22
1/4 – 18 NPTF	60	44
3/8 – 18 NPTF	60	44
M10 x 1.0	30	22
M12 x 1.5	40	29
M14 x 1.5	60	44
M16 x 1.5	80	59
M18 x 1.5	100	74

### Sender Testing:

Senders can be tested with an OHM meter that measures from 10 to 2,000 OHMs. Connect the positive lead from the tester to the sender terminal and the negative lead to a good ground. The following readings will occur if the sender is operating properly:

Temperature Sender: Room Temp (Sender Dependent) 300 – 1000 Ohms (• )

Pressure Sender: Engine off (Sender Dependent) 10 Ohms (• ), 240 Ohms (• )

Merchandise warranted against defects in factory workmanship and materials for a period of 24 months after purchase. This warranty applies to the first retail purchaser and covers only those products exposed to normal use or service. Provisions of this warranty shall not apply to a VDO product used for a purpose for which it is not designed, or which has been altered in any way that would be detrimental to the performance or life of the product, or misapplication, misuse, negligence or accident. On any VDO part or VDO product found to be defective after examination by manufacturer, manufacturer will only repair or replace the merchandise through the original selling dealer. Manufacturer assumes no responsibility for diagnosis, removal and/or installation labor, loss of vehicle use, loss of time, inconvenience or any other consequential expenses. The warranties herein are in lieu of any other expressed or implied warranties, including any implied warranty of merchantability of fitness, and any other obligation on the part of manufacturer, or selling dealer.

(NOTE: This is a "Limited Warranty" as defined by the Magnuson-Moss Warranty Act of 1975.)