

FORESPAR[®]

STEERING CONTROL ARM


Patent Pending



Allows Piloting From Your Stern Seat Providing:

- Greater Forward Visibility
- Easy Course Corrections
An Autopilot Can't Perform
- Relaxation While Maintaining Control

A New Sailing Experience

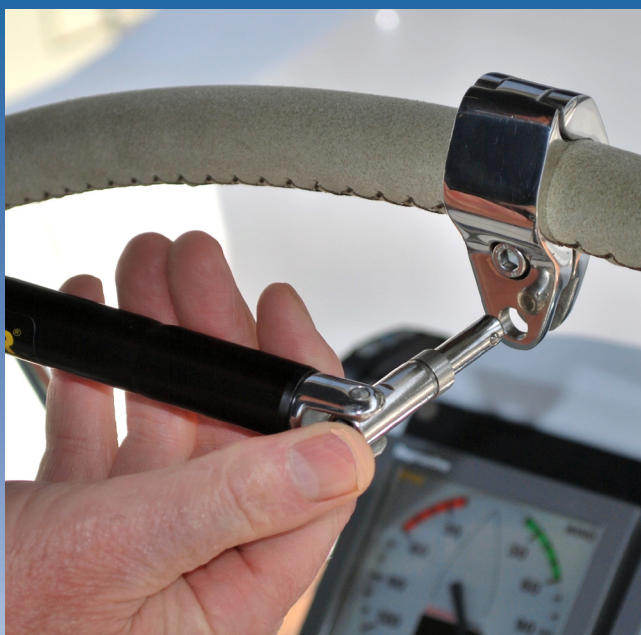

FORESPAR[®]
ACCESSORIES

Tel: 949 858-8820 • www.forespar.com

STEERING CONTROL ARM

INSTALLATION INSTRUCTIONS

Fits Most 7/8" - 1" Wheel Rims

1. Mount the stainless steel wheel clamp to the wheel rim as close to the center-line as possible.



2. Use the 5mm hex wrench to secure the wheel clamp directly to the rim



INSTRUCTIONS FOR USE

To adjust the length of the steering arm, twist to release and extend. Twist again to tighten. Fully depress pin when inserting or removing the steering control arm from the wheel clamp.

IMPORTANT:

The Steering Control Arm is intended for minor course corrections only and should not be used when tacking, jibbing or in rough or adverse conditions.

Remove the Steering Control Arm from the wheel clamp when not in use.



FORESPAR[®]
ACCESSORIES

FORESPAR PRODUCTS CORP

22322 GILBERTO - RANCHO SANTA MARGARITA, CA 92688
PH 949-858-8820 Fax 949-858-0505

email: sales@forespar.com • www.forespar.com

Part #104018 / Patent Pending